



B-1396-000 **7/8" Delrin Adapter**  
 Manufacturer and Model:  
**ACCUTRON**  
**BELMED**  
**MDT-McKESSON ANALOR FOUR**  
**PARKELL-SEDATRON**  
**TRIDENT**




P1407A **Bag Tee-Standard**  
 A-3379-000 **Canula Adapter**  
 with PB-102-7-BN Buna O-ring  
 Manufacturer and Model:  
**COASTAL**  
**NGC CHEMETRON**

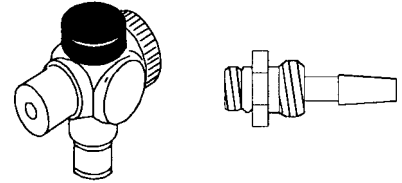

**No Special Adapters Needed**  
 Manufacturer and Model:  
**FRASER SWEATMAN**  
**FRASER HARLAKE**  
**OHMEDA**  
**MATRX** QUANTIFLEX  
 MDM


P1407A **Bag Tee-Standard**  
 A-3378-000 **Canula Adapter**  
 with PB-102-116BN Buna O-ring  
 Manufacturer and Model:  
**HAMPTON** SIMPLAIRE  
 MICRO

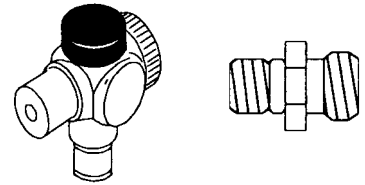


P1407B **Special Bag Tee**  
 Manufacturer and Model:  
**McKESSON ANALOR I & II**  
**STARFLIGHT DENETRON**



P1407A **Bag Tee-Standard**  
 A-3380-000 **3/4" 10 Adapter**  
 with PB-102-44-BN Buna O-ring  
 Manufacturer and Model:  
**McKESSON** ANALOR 3C

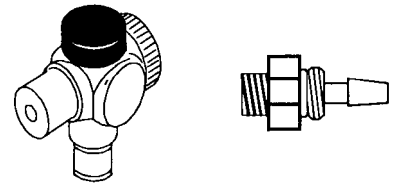

B-1216-DE5 **Adapter-22mm**  
 Manufacturer and Model:  
**SPICA**



5651 **Right Angle Adapter**  
 Manufacturer and Model:  
**PORTER INSTRUMENT**  
**Kit Replaces Porter Clean-Air™**  
**Rubber Goods** (mask with plastic sweeps and canister)



**IMPORTANT:** It is NOT recommended to retrofit PORTER Scavenger Rubber Goods to A-dec or Veriflo machines. Contact Porter Instrument or your Representative for our trade-in offers for these flowmeters.

Above Adapters in addition to the PORTER Scavenger Rubber Goods with In-Line Vacuum and 3L Breathing Bag make up a complete PORTER Retrofit Kit found on page 7 in this catalog.